
Subject: 2068 Interfacing
Posted by [Anonymous](#) on Fri, 11 Oct 2013 22:11:09 GMT
[View Forum Message](#) <> [Reply to Message](#)

Originally posted by: mccamy@topcat.DEC

Message-ID:
Date: Tue, 23-Oct-84 16:26:48 EDT
Article-I.D.: decwrl.3988
Posted: Tue Oct 23 16:26:48 1984
Date-Received: Wed, 24-Oct-84 08:17:27 EDT
Sender: daemon@decwrl.UUCP
Organization: DEC Engineering Network
Lines: 12

From: "...decvax!decwrl!rhea!Topcat!McCamy"
Merrimack, New Hampshire

I own a 2068 Sinclair computer. I am interested in interfacing it to the outside world, but I don't know what the port addresses are.

Does anyone know what the port addressing scheme is?

How can I use the IN & OUT commands for input & output?

Thanks.