
Subject: ?Wyse & Televideo attributes & modes
Posted by [bridger](#) on Mon, 12 Jan 1987 22:24:38 GMT
[View Forum Message](#) <> [Reply to Message](#)

Article-I.D.: brl-adm.2292
Posted: Mon Jan 12 17:24:38 1987
Date-Received: Tue, 13-Jan-87 01:02:23 EST
Sender: news@brl-adm.ARPA
Lines: 18

Does someone with hands-on experience with the Wyse 50...
and Televideo 9xx... series terminals know how to determine,
from a program that is running on a host computer attached to one
of those terminals:

1. what screen attributes are active, in which locations of the
screen?
2. what terminal modes are active, especially # columns, and text
segment?

In order to complete a BackGrounder ii screendriver for this group
of terminals I'd like to be able to restore the current screen
attributes when the screen gets redrawn. The manuals do not
seem to include commands to transmit attribute or mode information
to the host.

--bridger